# XDC2xxx

### 2x150A/1x300A High Performance Forward/Reverse Brushed DC Motor Controller with USB, CAN and Encoder Inputs



Roboteq's XDC2xxx controller is designed to convert commands received from an RC radio, Analog Joystick, wireless modem, PC (via RS232 or USB) or microcomputer into high voltage and high current output for driving one or two DC motors. Using CAN bus, up to 127 controllers can be networked at up to 1Mbit/s on a single twisted pair.

The controller features a high-performance 32-bit microcomputer and quadrature encoder inputs to perform advanced motion control algorithms in Open Loop or Close Loop (Speed or Position) modes. The XDC2xxx features several Analog, Pulse and Digital I/Os which can be remapped as command or feedback inputs, limit switches, or many other functions.

The controller's two motor channels can either be operated independently or mixed to set the direction and rotation of a vehicle by coordinating the motion of each motor. The XDC2xxx is available in a single channel version with double the current.

Numerous safety features are incorporated into the controller to ensure reliable and safe operation. The controller's operation can be extensively automated and customized using Basic Language scripts. The controller can be reprogrammed in the field with the latest features by downloading new operating software from Roboteq.

#### Applications

- Industrial Automation
- Tracking, Pan & Tilt systems
- Terrestrial and Underwater Robotic Vehicles
- Automatic Guided Vehicles
- Police and Military Robots
- Flight simulators
- Telepresence Systems
- Animatronics

#### **Features List**

- USB, RS232, 0-5V Analog, or Pulse (RC radio) command modes
- CAN bus up to 1Mbit/s
- Auto switch between USB, RS232, CAN, Analog, or Pulse based on user-defined priority
- Built-in high-power power drivers for two brushed DC motors at up to 150A output per channel
- Available in single channel version up to 300A
- Full forward & reverse control on each channel. Four quadrant operation. Supports regeneration
- Built-in programming language for automation and customization
- Operates from a single 10V-30V (XDC2x30) or 10-60V (XDC2x60) power source
- Programmable current limit for each channel for protecting controller, motors, wiring and battery
- Up to 6 Analog Inputs for use as command and/or feedback
- Up to 4 Pulse Length, Duty Cycle or Frequency Inputs for use as command and/or feedback
- Up to 6 Digital Inputs for use as Deadman Switch, Limit Switch, Emergency stop or user inputs
- Dual Quadrature Encoder inputs with 32-bit counters
- Two general purpose 24V, 1A output for brake release or accessories
- Selectable min, max, center and deadband in Pulse and Analog modes
- Selectable exponentiation factors for each command inputs
- Trigger action if Analog, Pulse or Encoder capture are outside user selectable range (soft limit switches)
- Open loop or closed loop speed control operation



- Closed loop position control with analog or pulse/frequency feedback
- Precise speed and position control when Encoder feedback is used
- PID control loop with separate gains for each channel
- Optional Mixed control (sum and difference) for tank-like steering
- Configurable Data Logging of operating parameters on RS232 Output for telemetry or analysis
- Built-in Battery Voltage and Temperature sensors
- Optional 12V backup power input for powering safely the controller if the main motor batteries are discharged
- Power Control wire for turning On or Off the controller from external microcomputer or switch
- No consumption by output stage when motors stopped
- Regulated 5V output for powering Sensors, Encoders, RC radio, RF Modem or microcomputer
- Separate Programmable acceleration and deceleration for each motor
- Separate Programmable maximum forward and reverse power
- Ultra-efficient 1.5 mOhm ON resistance MOSFETs
- Stall detection and selectable triggered action if Amps is outside user-selected range
- Short circuit protection

#### **Orderable Product References**

TABLE 1.

- Overvoltage and Undervoltage protection
- Programmable Watchdog for automatic motor shutdown in case of command loss
- Overtemperature protection
- Diagnostic LED
- Extruded aluminum, heat sinking enclosure for operation harsh shock and temperature environment
- Efficient heat sinking. Operates without a fan in most applications.
- Dustproof and weather resistant. IP51 NEMA rating
- Power wiring via heavy AWG8 cables
- 9" (228.5mm) L, 5.5" W (140mm), 1.6" (40mm) H
- -400 to +850 C operating environment
- 3 lbs (1,350g)
- Easy configuration, tuning and monitory using provided PC utility
- Field upgradeable software for installing latest features via the internet

Reference	Number of Channels	Amps/Channel	Volts
XDC2230	2	120	30
XDC2230S	1	240	30
XDC2460	2	150	60
XDC2460S	1	300	60



#### **Important Safety Disclaimer**

Dangerous uncontrolled motor runaway condition can occur for a number of reasons, including, but not limited to: command or feedback wiring failure, configuration error, faulty firmware, errors in user script or user program, or controller hardware failure.

The user must assume that such failures can occur and must make his/her system safe in all conditions. Roboteq will not be liable in case of damage or injury as a result of product misuse or failure.

#### **Power Wires Identifications and Connection**

Power connections are made by means of heavy gauge wires located at the back of the controller.

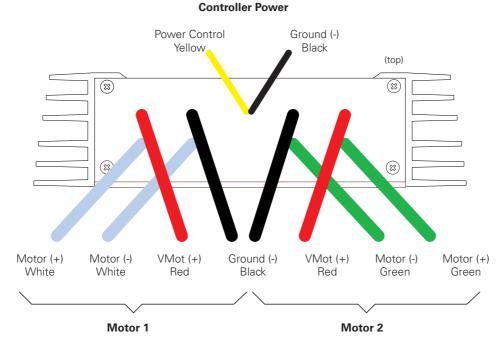


FIGURE 1. Rear Controller Layout

The diagram below shows how to wire the controller and how to turn power On and Off.

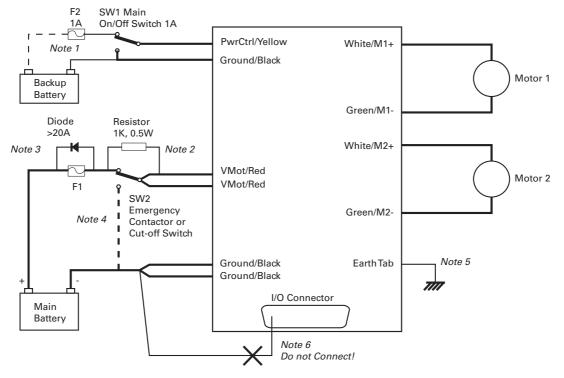


FIGURE 2. Powering the controller. Thick lines identify MANDATORY connections

#### **Important Warning**

Carefully follow the wiring instructions provided in the Power Connection section of the User Manual. The information on this datasheet is only a summary.

#### **Mandatory Connections**

It is imperative that the controller is connected as shown in the above diagram in order to ensure a safe and trouble-free operation. All connections shown as thick black lines are mandatory. The controller must be powered On/ Off using switch SW1on the Power Control Header. Use a suitable high-current fuse F1 as a safety measure to prevent damage to the wiring in case of major controller malfunction.

#### **Emergency Switch or Contactor**

The battery must be connected in permanence to the controller's VMot power via an input emergency switch or contactor SW2 as additional safety measure. The user must be able to deactivate the switch or contactor at any time, independently of the controller state.

#### **Precautions and Optional Connections**

Note 1: Backup battery to ensure motor operation with weak or discharged batteries, connect a second battery to the Power Control wire/terminal via the SW1 switch.

Note 2: Use precharge 1K, 0.5W Resistor to prevent switch arcing.


Note 3: Insert a high-current diode to ensure a return path to the battery during regeneration in case the fuse is blown.

Note 4: Optionally ground the VMot tabs when the controller is Off if there is any concern that the motors could be made to spin and generate voltage in excess of 30V.

Note 5: Beware not to create a path from the ground pins on the I/O connector and the battery minus terminal.

#### **Use of Safety Contactor for Critical Applications**

An external safety contactor must be used in any application where damage to property or injury to person can occur because of uncontrolled motor operation resulting from failure in the controller's power output stage.

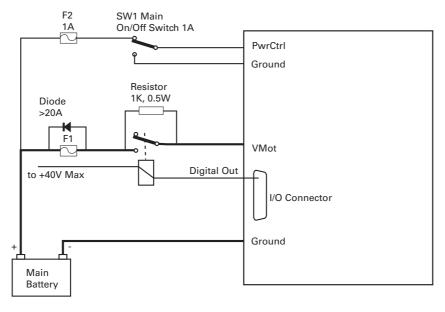


#### FIGURE 3. Contactor wiring diagram

The contactor coil must be connected to a digital output configured to activate when "No MOSFET Failure". The controller will automatically deactivate the coil if the output is expected to be off and battery current of 1A or more is measured for more than 0.5s. This circuit will not protect against other sources of failure such as those described in the "Important Safety Disclaimer" on page 3.

#### **Single Channel Motor Wiring**

The single channel version of the controller (XDC2xxxS) requires that the output be parallel and that the load be wired as shown in the diagram below.

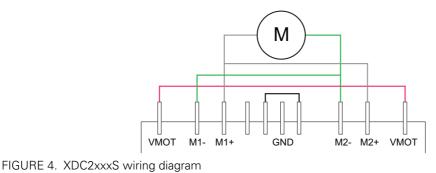

#### **Important Warning**

This wiring is only possible on controllers fitted with the Single Channel version of the controller logic. Dual channel controllers will be damaged if wired as single channel. Verify that the PC utility identifies the controller as XDC2230S or XDC2460S before applying power to the load.

#### **Encoder Wiring**

The encoder connector is a 6-pin Molex Microfit 3.0, model 43645. Pin assignment is in the table below.

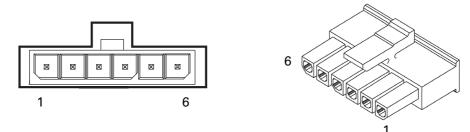


FIGURE 5. Encoder connector

TABLE 4.

Pin Number	1	2	3	4	5	6
Signal	5Vout	Enc1A	Enc1B	Enc2A	Enc2B	GND

#### **Controller Mounting**

During motor operation, the controller will generate heat that must be evacuated. The published amps rating can only be fully achieved if adequate cooling is provided. Mount the controller so that the bottom plate makes contact with a metallic surface (chassis, cabinet) to conduct the heat.

#### **Commands and I/O Connections**

Connection to RC Radio, Microcomputer, Joystick and other low current sensors and actuators is done via the 15 connector located in front of the board. The functions of many pins vary depending on user configuration. Pin assignment is found in the table below.

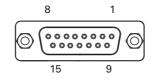


FIGURE 6. Connector pin locations

TABLE 5.

<b>Connector Pin</b>	Power	Dout	Com	RC	Ana	Dinput	Default Config
1		DOUT1					Motor Brake
9		DOUT2					Safety Contactor
2			TxOut				RS232Tx
10					ANA5	DIN5	AnaCmd1 (1)
3			RxIn				RS232Rx
11				RC4	ANA4	DIN4	AnaCmd2 (1)
4				RC1	ANA1	DIN1	RCRadio1
12				RC3	ANA3	DIN3	Unused
5	GND						
13	GND						

TABLE 5.

Connector Pin	Power	Dout	Com	RC	Ana	Dinput	Default Config
6			CANL				CAN Low
14	5VOut						
7			CANH				CAN High
15					ANA6	DIN6	Unused
8				RC2	ANA2	DIN2	RCRadio2
Note 1: Analog command is disabled in factory default configuration.							

#### **Enabling Analog Commands**

For safety reasons, the Analog command mode is disabled by default. To enable the Analog mode, use the PC utility and set Analog in Command Priority 2 or 3 (leave Serial as priority 1). Note that by default the additional securities are enabled and will prevent the motor from starting unless the potentiometer is centered, or if the voltage is below 0.25V or above 4.75V. The drawing shows suggested assignment of Pot 1 to ANA5 and Pot 2 to ANA4. Use the PC utility to enable and assign analog inputs.

#### **CAN Bus Operation**

The controller can interface to a standard CAN Bus network, using 4 possible protocols: Standard CANOpen, and two simplified proprietary schemes (MiniCAN, RawCAN and RoboCAN). Please refer to the User Manual for details.

#### **USB** communication

Use USB only for configuration, monitoring and troubleshooting. USB is not a reliable communication method when used in a electrically noisy environments and communication will not always recover after it is lost without unplugging and replugging the connector, or restarting the controller. Always prefer RS232 communication when interfacing to a computer.

#### **Status LED Flashing Patterns**

After the controller is powered on, the Power LED will turn on, indicating that the controller is On. The Status LED will be flashing at a 2 seconds interval. The flashing pattern provides operating or exception status information.


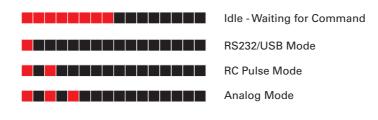


FIGURE 7. Normal Operation Flashing Patterns

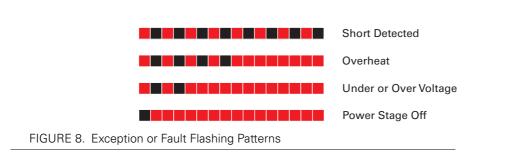

Additional status information may be obtained by monitoring the controller with the PC utility.

#### **Electrical Specifications**

#### **Absolute Maximum Values**

The values in the table below should never be exceeded, permanent damage to the controller may result.

TABLE 6.

Parameter	Measure point	Model	Min	Тур	Max	Units
Battery Leads Voltage	Ground to VBat	XDC2x30			35	Volts
		XDC2x60			62	Volts
Reverse Voltage on Battery Leads	Ground to VBat	All	-1			Volts
Power Control Voltage	Ground to Pwr Control wire	All			35	Volts
Motor Leads Voltage	Ground to M1+, M1-, M2+, M2-	XDC2x30			35(1)	Volts
		XDC2x60			62 (1)	Volts
Digital Output Voltage	Ground to Output pins	All			30	Volts
Analog and Digital Inputs Voltage	Ground to any signal pin on 25 & 9- pin connectors	All			15	Volts
RS232 I/O pins Voltage	External voltage applied to Rx/Tx pins	All			15	Volts
Case Temperature	Case	All	-40		85	oC
Humidity	Case	All			100 (2)	%
Note 1: Maximum regeneration vo Note 2: Non-condensing	Itage in normal operation. Never inject a	DC voltage fr	om a ba	ttery or	other fixed	d source

#### **Power Stage Electrical Specifications (at 25oC ambient)**

TABLE 7.

Parameter	Measure point	Models	Min	Тур	Max	Units
Battery Leads Voltage	Ground to VBat	XDC2x30	0 (1)		35	Volts
		XDC2x60			62	
Motor Leads Voltage	Ground to M1+, M1-, M2+, M2-	XDC2x30	0 (1)		30 (2)	Volts
		XDC2x60			62 (2)	
Power Control Voltage	Ground to Power Control wire	All	0 (1)		62	Volts
Minimum Operating Voltage	VBat or Pwr Ctrl wires	All	9 (3)			Volts

Robote

TABLE 7.

Parameter	Measure point	Models	Min	Тур	Max	Units
Over Voltage protection range	Ground to VBat	XDC2x30	5	30 (4)	35	Volts
		XDC2x60	5	60	62	Volts
Under Voltage protection range	Ground to VBat	XDC2x30	0	5 (4)	35	Volts
		XDC2x60	0	5	62	Volts
Idle Current Consumption	VBat or Pwr Ctrl wires	All	50	100 (5)	150	mA
ON Resistance (Excluding wire	VBat to M+, plus M- to	XDC2x30		6		mOhm
resistance)	Ground at 100% power. Per channel	XDC2x30S		3		mOhm
	Per channel	XDC2x60		3		mOhm
		XDC2x60S		1.5		mOhm
Max Current per channel for	Ch1 or Ch2 Motor current	XDC2230			120	Amps
30s		XDC2230S			240 (6)	Amps
		XDC2x60			150	Amps
		XDC2x60S			300	Amps
Continuous Max Current per	Ch1 or Ch2 Motor current	XDC2230			70 (7)	Amps
channel		XDC2230S			140 (6)(7)	Amps
		XDC2x60			80 (7)	Amps
		XDC2x60S			160 (6)(7)	Amps
Current Limit range	Ch1 or Ch2 Motor current	XDC2230	10	100(8)	120	Amps
		XDC2230S	10	200 (8)	240 (6)	Amps
		XDC2x60	10		150	Amps
		XDC2x60S	10		300 (6)	Amps
Stall Detection Amps range	Ch1 or Ch2 Motor current	XDC2230	10	120(8)	120	Amps
		XDC2230S	10	240 (8)	240 (6)	Amps
		XDC2x60	10	150	150	Amps
		XDC2x60S	10	300	300 (6)	Amps
Stall Detection timeout range	Ch1 or Ch2 Motor current	All	1	65000 (9)	65000	milli- seconds
Short Circuit Detection thresh-	Between Motor wires or	XDC22xx		500 (11)		Amps
old (10)	Between Motor wire and Ground	XDC24xxS		1000 (6)(11)		Amps
Short Circuit Detection thresh- old	Between Motor wires and VBat	All	No Protection. Permanent damage will resu			
Motor Acceleration/Decelera- tion range	Ch1 or Ch2	All	100	500 (12)	65000	milli- seconds

TABLE 7.

Parameter	Measure point	Models	Min	Тур	Мах	Units
Note 1: Negative voltage will cau	se a large surge current. Pro	otection fuse ne	eded if b	attery polarity i	nversion is p	oossible
Note 2: Maximum regeneration	oltage in normal operation.	Never inject a D	C voltage	e from a battery	or other fix	ked source
Note 3: Minimum voltage must b	e present on VBat or Powe	r Control wire				
Note 4: Factory default value. Ad	justable in 0.1V increments					
Note 5: Current consumption is I	ower when higher voltage is	s applied to the o	controller	's VBat or Pwr	Ctrl wires	
Note 6: Current is sum of both sy	nchronized channels. Curre	nt must be bala	nced bet	ween channel t	o obtain ma	ax current.
Note 7: Estimate. Limited by cas	e temperature. Current may	be higher with	better co	oling		
Note 8: Factory default value. Ad	justable in 0.5A increments					
Note 9: Factory default value. Tir	ne in ms that Stall current m	nust be exceede	d for det	ection		
Note 10: Controller will stop until	restarted in case of short c	ircuit detection				
Note 11: Typical						
Note 12: Factory default value. T	me in ms for power to go fr	om 0 to 100%				

#### Command, I/O and Sensor Signals Specifications

TABLE 8.

Parameter	Measure point	Min	Тур	Max	Units
Main 5V Output Voltage	Ground to 5V pins on	4.8	5	5.2	Volts
5V Output Current	5V pins on RJ45 and DSub15			200 (1)	mA
Digital Output Voltage	Ground to Output pins			40	Volts
Digital Output Current	Output pins, sink current			1	Amps
Output On resistance	Output pin to ground		0.75	1.5	Ohm
Output Short circuit threshold	Output pin	1.05	1.4	1.75	Amps
Input Impedances	AIN/DIN Input to Ground		53		kOhm
Digital Input 0 Level	Ground to Input pins	-1		1	Volts
Digital Input 1 Level	Ground to Input pins	3		6	Volts
Analog Input Range	Ground to Input pins	0		5.1	Volts
Analog Input Precision	Ground to Input pins		0.5		%
Analog Input Resolution	Ground to Input pins		1		mV
Pulse durations	Pulse inputs	20000		10	us
Pulse repeat rate	Pulse inputs	50		250	Hz
Pulse Capture Resolution	Pulse inputs		1		us
Frequency Capture	Pulse inputs	100		10000	Hz
Encoder count	Internal	-2.147		2.147	10^9 Counts
Encoder frequency	Encoder input pins			2000	kHz
Note 1: Sum of all 5VOut output	ts	I		-	

#### **Operating & Timing Specifications**

#### TABLE 9.

Parameter	Measure Point	Min	Тур	Max	Units
Command Latency	Command to output change	0	0.5	1	ms
PWM Frequency	Ch1, Ch2 outputs	1	18 (1)	20	kHz
Closed Loop update rate	Internal		1000		Hz
USB Rate	USB pins			12	MBits/s
RS232 baud rate	Rx & Tx pins		115200 (2)		Bits/s
RS232 Watchdog timeout	Rx pin	1 (3)		65000	ms
Note 1: May be adjusted with	configuration program	•	L	•	1
Note 2: 115200, 8-bit, no parit	y, 1 stop bit, no flow control				
Note 3: May be disabled with	value 0				

#### Scripting

TABLE 10.

Parameter	Measure Point	Min	Тур	Max	Units
Scripting Flash Memory	Internal		16384		Bytes
Max Basic Language programs	Internal	1000		1500	Lines
Integer Variables	Internal		1024		Words (1)
Boolean Variables	Internal		1024		Symbols
Execution Speed	Internal	50 000	100 000		Lines/s
Note 1: 32-bit words			1		

#### **Thermal Specifications**

TABLE 11.


Parameter	Measure Point	Model	Min	Тур	Max	Units
Case Temperature	Case	All	-40		85 (1)	оС
Thermal Protection range	Case	All	80		90 (2)	оС
Power Dissipation	Case	All			70	Watts
Thermal resistance	Power MOSFETs to case	All			0.6	oC/W
Note 1: Thermal protection	will protect the controller pe	ower	•	4		
Note 2: Max allowed powe	er out starts lowering at mini	mum of range,	down to 0 at	max of rang	ge	


XDC2xxx Motor Controller Datasheet

#### **Mechanical Specifications**

TABLE 12.

Parameter	Measure Point	Min	Тур	Max	Units
Weight	Case		1.5 (3.0)		kg (lbs)
Wire Length	Case		17 (43)		inches (mm)
Power Wire Gauge	Wire		8		AWG
Power Wire Diameter	Outside diameter		0.26 (6.6)		inches (mm)

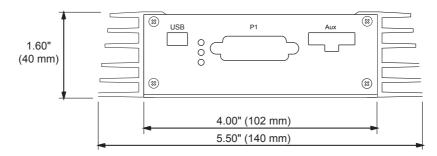

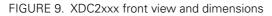

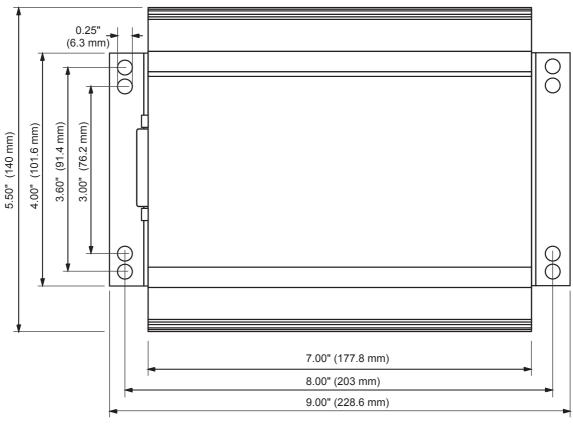


FIGURE 10. XDC2xxx top view and dimensions