
Adding your components to BiPOM Breakout Boards

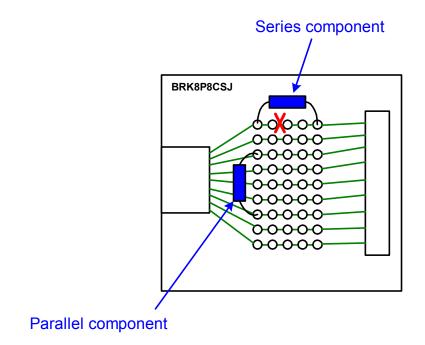

 $oldsymbol{\chi}$ Denotes where to cut the PCB trace

(The traces can be cut with an Exacto knife)