

Skywire™ HSPA+ HE910 Embedded Cellular Modem Datasheet

NimbeLink Corp
Updated: July 2016



© NimbeLink Corp. 2016. All rights reserved.

NimbeLink Corp. provides this documentation in support of its products for the internal use of its current and prospective customers. The publication of this document does not create any other right or license in any party to use any content contained in or referred to in this document and any modification or redistribution of this document is not permitted.

While efforts are made to ensure accuracy, typographical and other errors may exist in this document. NimbeLink reserves the right to modify or discontinue its products and to modify this and any other product documentation at any time.

All NimbeLink products are sold subject to its published Terms and Conditions, subject to any separate terms agreed with its customers. No warranty of any type is extended by publication of this documentation, including, but not limited to, implied warranties of merchantability, fitness for a particular purpose and non-infringement.

XBee is a registered trademark of Digi International, Inc.

NimbeLink is a registered trademark, and Skywire is a trademark, of NimbeLink Corp. All trademarks, service marks and similar designations referenced in this document are the property of their respective owners.

Table of Contents

1. Introduction

- 1.1 ORDERABLE PART NUMBERS
- 1.2 Additional Resources
- 1.3 PRODUCT OVERVIEW
- 1.4 BLOCK DIAGRAM

2. TECHNICAL SPECIFICATIONS

- 2.1 ELECTRICAL SPECIFICATIONS
- 2.2 Mechanical Specifications
- 2.3 Environmental Specifications

3. IMPORTANT DESIGN CONSIDERATIONS

- 3.1 ON OFF SIGNAL
- 3.2 POWER SUPPLY REQUIREMENTS
- 3.3 Serial Communications
- 3.3 Network Connection Status LED

4. MOUNTING GUIDELINES

- 4.1 BOARD TO BOARD CONNECTORS APPROACH
- 4.2 Solder to Board connection approach

5. Antenna Considerations

- 5.1 PRIMARY ANTENNA REQUIREMENTS
- 5.2 DIVERSITY ANTENNA REQUIREMENTS
- 5.3 RECOMMENDED ANTENNAS

6. CERTIFICATIONS

- 6.1 CARRIER SPECIFIC
- 6.2 GEOGRAPHY SPECIFIC

7. FEDERAL REGULATORY LICENSING

- 7.1 ECCN NUMBER
- 7.2 HTS Codes
- 8. END PRODUCT LABELING REQUIREMENTS

1. Introduction

1.1 Orderable Part Numbers

Orderable Device	Telit Chipset	Operating Temperature	Bands	Fallback?	Network Type
NL-SW-HSPA	HE910-DG	-40 to +85°C	B1, B2, B4, B5, B6, B8	Yes	GSM
NL-SW-HSPAP	HE910-NAD	-40 to +85°C	B2, B4, B5, B6	Yes	GSM
NL-SW-HSPAPG	HE910-NAG	-40 to +85°C	B2, B4, B5, B6	Yes	GSM
NL-SW-HSPAPE	HE910-EU	-40 to +85°C	B1, B5, B6, B8	Yes	GSM

1.2 Additional Resources


The following documents or documentation resources are referenced within this document.

Telit's HE910 Hardware User Guide

1.3 Product Overview

Add robust cellular connectivity to your M2M devices with scalable radio technology with Skywire line of modems including HE910 based HSPA+ solutions. Extensive experience in designing and building embedded product solutions makes the NimbeLink Skywire™ embedded cellular modem the smallest on the market. It complies with the popular XBEE® interface standard and supports multiple GSM bands and fallback capability minimizing costs of hardware and network access. The module is designed for volume production and is intended for OEMs to embed into end equipment designs.

1.4 Block Diagram

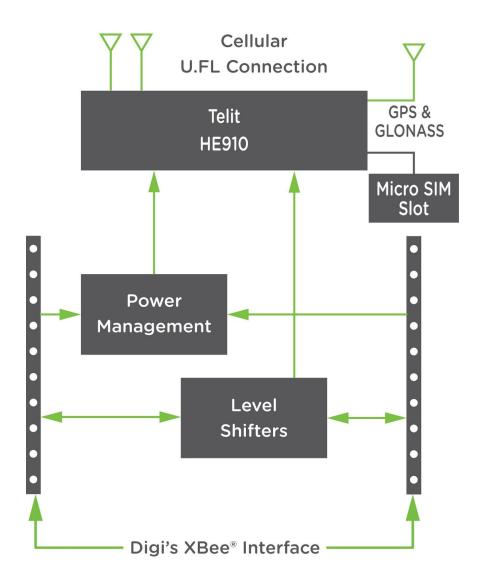

2. Technical Specifications

2.1 Electrical Specifications

2.1.1 Absolute Maximum Ratings

Parameter	Signal	Maximum Rating
Main Power Supply	VCC	4.3V
I/O Voltage Reference	VREF	5.0V

2.1.2 Recommended Ratings & Module Pin out 2.1.2.1 Connectors J1 and J2

Pin Name **Direction** Description Min **Typical** If not used Max VCC 3.9V 1 Input Main Power supply 3.5V 4.3V Must be implemented VOH: Must be implemented VOI: VREF x if USB not used, 2 DOUT Output UART data out, I/O level tied to VREF GND to 0.67 to No connection 0.55V VREF VIH: Must be implemented VIL: VREF-0.4 if USB not used, 3 DIN Input UART data in, I/O level tied to VREF GND to No connection 0.15V to VREF 4 **GND** Input **Ground Pin** 0 Must be implemented Controls HW_SHUTDOWN input on Telit HE910, tie low for 200mS and released to activate. Internally pulled RESET_n 5 Input up to VCC. Drive with open collector **VREF** No connection IN output. Assert only in an emergency as the module will not gracefully exit the cellular network when asserted. VUSB Supply for USB interface 4.4V 5V 5V 6 Input No connection USB D+ 1/0 USB differential Data + signal No connection USB differential Data - signal 8 USB D-1/0 No connection VIH: VIL: VREF-0.4 DTR Tie to GND 9 Input Modem Data Terminal Ready input GND to 0.15V to VREF GND **Ground Pin** 10 Input 0 Must be implemented 11 GND **Ground Pin** 0 Input Must be implemented VOL: Modem Clear to Send hardware flow VOH: 12 CTS Output No connection GND to control output

0.55V

						VREF x	
						0.67 to	
13	ON/nSL EEP	Output	Signal drives the onboard LED indicating network status. OFF = Device OFF, Fast blink = Searching for Network & Not Registered, Slow Blink = Registered with full service, Permanently on = call is active. See TelitHE910 manual for additional information.	0		VREF	No connection
14	VREF	Input	Voltage reference for offboard I/O signals. This signal drives the input voltage side of an onboard buffer which converts all external I/O voltage from VREF range to 1.8V range to drive the onboard TelitHE910 modem module.	1.65V	1.8V or 3.3V	5.0V	Must be implemented
15	GND	Input	Ground Pin		0		Must be implemented
16	RTS	Input	Modem Request to Send hardware flow control input	VIL: GND to 0.15V		VIH: VREF-0.4 V to VREF	Tie to GND
17	DIO3	I/O	Programmable GPIO_03 on TelitHE910 module	0		1.8V	No connection
18	DIO2	I/O	Programmable GPIO_02 on TelitHE910 module	0		1.8V	No connection
19	ADC1	Input	ADC_IN1 input on Telit HE910module (8bit resolution, <6.6mV)	0		1.3V	No connection
20	ON_OFF	Input	Modem On/Off signal. Assert low for at least 1 second and then release to activate start sequence. Drive with open collector output. Internally pulled up to internal I/O rail with pull up. Do not use any external pull ups. Note: If you want modem to turn on automatically when power is applied, permanently tie this signal to GND.	0		1.8V	Must be implemented.

2.1.2.2 Connectors J3, X1, X2, X3

Connector Designator	Description	Connector Location
J3	Micro SIM Connector	Bottom Side of Module
X1	Primary Antenna Connection	Topside of Module
X2	Diversity Antenna Connection	Topside of Module
Х3	GPS/GNSS Satellite Receiver	Bottom Side of Module

2.2 Mechanical Specifications

2.2.1 Mechanical Characteristics

Parameter	Typical	Unit
Dimensions (excluding pin height, for solder to board applications)	29.0 x 33.60 x 6.63	mm
Dimensions (including pin height, for board to board connector	29.0 x 33.60 x 10.73	
applications)		mm
Weight	X	Grams
Connector Insertion/Removal	hundreds	Cycles

2.2.2 Mating Connectors

Connector	Manufact	Populated on	Recommended	
Designator	ure	Module	Mate	Mate Manufacture
		951110-2530-AR-		
J1, J2	3M	PR	950510-6102-AR	3M
			Acceptable	
			alternate:	Sullins Connector
			NPPN101BFCN-RC	Solutions
J3	Molex	786463001	Micro SIM Card	Micro SIM Card
X1, X2, X3	Hirose	U.FL-R-SMT(10)	CAB.011	Taoglas

2.2.3 Device Placement

⚠ Make sure the Skywire™ is installed in the correct orientation; failure to do so will damage the device and void the warranty.

2.3 Environmental Specifications

Parameter	Min	Typical	Max	Unit	Note
Operating Temperature	-40	25	+85	°C	
Storage Temperature	-40	25	+85	°C	
Operating Humidity	20		90	%	Non-condensing

3. Important Design Considerations

3.1 ON_OFF Signal

To conserve power, the Telit HE910 does not automatically start up when power is applied. The baseboard design must supply a means to assert the ON_OFF signal for the specified time (at least 5 seconds) and then released to start-up the module. After asserting the ON_OFF signal, software must wait for 15 seconds before attempting to communicate with the HE910. To make module automatically start when power is applied, tie ON/OFF signal to GND permanently. See Telit Hardware User Guide for additional details regarding the ON_OFF signal.

3.2 Power Supply Requirements

The equipment must be supplied by an external limited power source in compliance with the clause 2.5 of the standard IEC-60950-1.

The module will regularly consume high amounts of current on the Main Power Supply (VCC), up to 2A during active transmits and receives. The baseboard power supply should be designed to support peak currents up to 2 Amps. A 100uF capacitor should be placed near the VCC pin on the module to ensure ample energy is available, with a low inductance path to the VCC pin. For example power supply designs, there are multiple references available. See the NimbeLink Skywire™Development Kit schematic for a switching regulator example, or reference the Telit Hardware User Guide which has an example of both Linear and Switching regulator designs.

3.3 Serial Communications

The HE910 can communicate over UART and/or USB. Design should implement one or both serial interfaces to be able to send commands to the modem.

3.4 Network Connection Status LED

The ON/nSLEEP signal on pin 13 drives the on-board LED indicating network status. By default, the 3G EVDO module has this setting disabled. Use the following commands to enable and save this feature.

First, configure the GPIO for alternate function:

AT#GPIO = 1,0,2

The modem should respond with:

OK

Next, set the desired LED behavior with this command:

AT#SLED=2,10,10

The modem should respond with:

OK

Finally, commit the changes to non-volatile memory so the setting will persist across power down/power up:

AT#SLEDSAV

The modem should respond with:

OK

LED Status Network Status Indication	
Permanently OFF	Device OFF or setting disabled (see above)
Permanently ON	Searching for Network & Not Registered
Slow Blinking	Registered with full service
Permanently ON	Call is active (Modem has been registered)

4. Mounting Guidelines

The Skywire[™] embedded cellular modem supports multiple connection methods, the two primary methods are board to board connectors and soldering directly to the baseboard.

4.1 Board to Board connectors approach


The XBEE® form factor calls for two, 10 pin, 2mm pitch female receptacles.


There are many connector manufacturers that can be used; below is one readily available product:


Manufacturer: 3M Alternate: Sullins Connector Solutions


Part Number: 950510-6102-AR Alternate P/N: NPPN101BFCN-RC

Typical part drawing and footprint information:

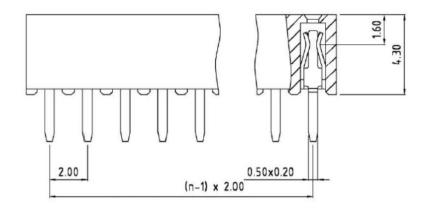

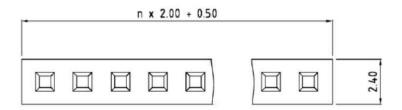


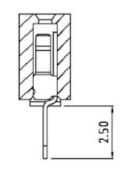

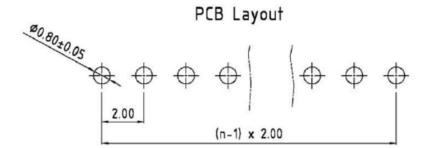

4.2 Solder to Board connection approach

The module can be soldered directly to a PCB. The PCB should be designed with two rows of ten, 0.8mm plated thru holes spaced 2mm apart. The two rows should be 22mm apart. See drawing for recommended footprint. Measurements are in millimeters. U.FL locations are marked with circles, X1 and X2 on top side of board, J3 is Micro SIM card slot on bottom side of board.

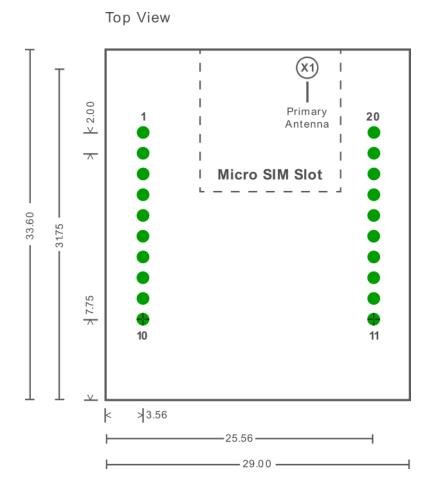

5. Antenna Considerations

5.1 Primary Antenna Requirements

These tables are copied from Telit HE910 Hardware User Guide. Designers should review latest HE910 Hardware User Guide to ensure the information is up to date.

	ANTENNA REQUIREMENTS
Frequency range	Depending by frequency band(s) provided by the network operator, the customer shall use the most suitable antenna for that/those band(s)
Bandwidth (GSM/EDGE)	70 MHz in GSM850, 80 MHz in GSM900, 170 MHz in DCS & 140 MHz PCS band
Bandwidth (WCDMA)	70 MHz in WCDMA Band V 80 MHz in WCDMA Band VIII 460 MHz in WCDMA Band IV 140 MHz in WCDMA Band II 250 MHz in WCDMA Band I
Impedance	50 ohm
Input power	> 33dBm(2 W) peak power in GSM > 24dBm Average power in WCDMA
VSWR absolute max	≤ 10:1 (limit to avoid permanent damage)
VSWR recommended	≤ 2:1 (limit to fulfil all regulatory requirements)

5.2 Diversity Antenna Requirements

These tables are copied from Telit HE910 Hardware User Guide. Designers should review latest HE910 Hardware User Guide to ensure the information is up to date.

	ANTENNA REQUIREMENTS
Frequency range	Depending by frequency band(s) provided by the network operator, the customer shall use the most suitable antenna for that/those band(s)
Bandwidth (GSM/EDGE)	70 MHz in GSM850, 80 MHz in GSM900 & 140 MHz PCS band
Bandwidth (WCDMA)	70 MHz in WCDMA Band V 80 MHz in WCDMA Band VIII 140 MHz in WCDMA Band II 250 MHz in WCDMA Band I
Impedance	50 ohm

5.3 Recommended Antennas

Туре	Manufacturer	Part Number
Primary & Diversity	Taoglas ¹	TG.30.8113
Primary & GPS	Taoglas ¹	MA.301.A.AB.001

Note 1: U.FL to SMA adapter required.

6. Certifications

6.1 Carrier Specific

Each carrier has different requirements for activating the HE910 modem on their networks. Many accept the Telit PTCRB & GCF certification to allow device on the network, however, recent carrier preferences may require the end product to go through PTCRB & GCF certification in the final enclosure, antenna, and software configuration.

6.2 Geography Specific

Federal Communications Commission (FCC47) part 22, 24 Complies with FCC47 Part 15 Class B Radiated and Conducted Emissions

7. Federal Regulatory Licensing

7.1 Export Control Classification Number (ECCN)

ECCNs are five character alpha-numeric designations used on the Commerce Control List (CCL) to identify dual-use items for export control purposes. An ECCN categorizes items based on the nature of the product, i.e. type of commodity, software, or technology and its respective technical parameters.

All Skywire Modems: 5A992.a

7.2 Harmonized Tariff Schedule Code

HTS Code: 8517.62.0010

8. End Product Labeling Requirements

Device Uses Approved Radio: NL-SW-HSPAP

Contains FCC ID: RI7HE910NA and IC ID: 5131A-HE910NA

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interferences, and (2) this device must accept any interference received, including interference that may cause undesired operation.