




Willow Sensors Modbus Bridge Sensor Quick Start Guide

Document Revision: 1.00

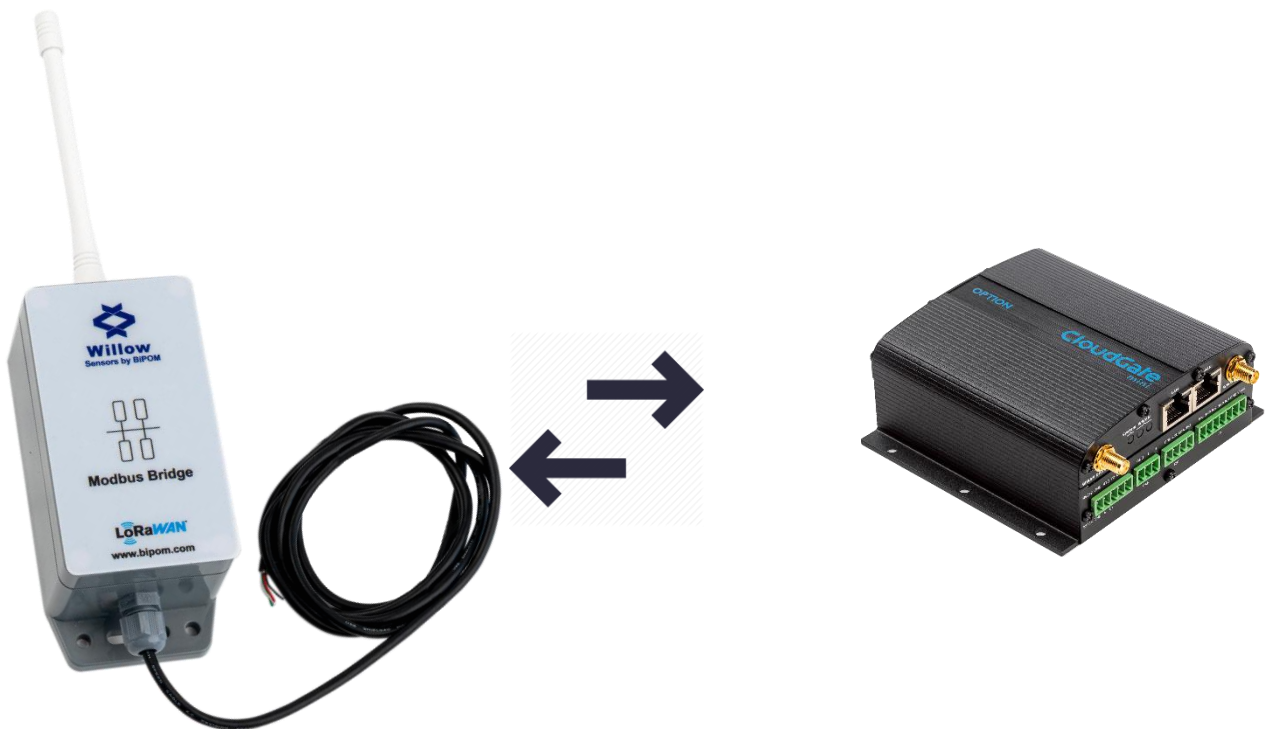

www.bipom.com



Overview

The quick start guide explains the steps that should be followed by the user to realize the integration of WS-O-8-AE-MB-1 to Cloudgate and start to use the sensor.



Contents

Integration Steps

Cloudgate Configurations

LoRaWAN Sensor Activation LuvitRED



Integration Steps

Cloudgate Configurations

Cloudgate requires one time setup for the LuvitRED installation to enable LoRaWAN functionality. After the one time setup, user can skip Cloudgate Configuration steps.

To realize configurations, go to <https://cloudgateuniverse.com/library> and download the latest firmware and LuvitRED application. Choose which firmware to download according to your Cloudgate model.

1. View firmware and download it according to your Cloudgate model.

The screenshot shows a grid of four categories in the Cloudgate library:

- Firmware:** 9 firmwares. A blue button labeled "View firmware" is highlighted with a red box.
- Radio Firmware:** 8 radio firmwares. A blue button labeled "View radio firmware" is present.
- Configurations:** 2 configurations. A blue button labeled "View configurations" is present.
- Applications:** 12 applications. A blue button labeled "View applications" is highlighted with a red box.

2. View applications and click on Option LuvitRED 2.0

The screenshot shows the details for the "Option LuvitRED 2.0" application:

- Option LuvitRED 2.0**
- Easy-to-use graphical, "drag and drop & visual wiring" configuration environment for design and deployment of smart M2M and IoT Solutions on CloudGate. This version of LuvitRED has to be used together with Option CloudGate firmware 2.x.x!
- Available for: All groups
- A blue button labeled "View details" is present.



3. Download the latest version

Option LuvitRED 2.0
Easy-to-use graphical, "drag and drop & visual wiring" configuration environment for design and deployment of smart M2M and IoT Solutions on CloudGate. This version of LuvitRED has to be used together with Option CloudGate firmware 2.x.x!

[Release notes](#)

Version	Download	What's new
2.27.1		What's new
2.27.0		What's new
2.26.1		What's new

4. Now we are ready to complete configurations of Cloudgate. Once you open the Home Page of Cloudgate go to Provisioning tab and upload files we have downloaded.

CloudGate Connecting THINGS to the cloud Log out **OPTION**

Home Interfaces Firewall Connection Persistence **Provisioning** System Plugins VPN

Device Provisioning

- Check for updates
- Upload device provisioning file
- Settings

Check for updates

Note: this will automatically install updates to the gateway, even when automatic provisioning has been disabled. "Check for updates" can cause data traffic on your wireless operator subscription.

Check for updates

Upload device provisioning file

Select file Dosya seçilmedi

Upload


Once the process done, you should be able to see related files on the home page.

Firmware version: Option mini micro Firmware - 2.98.2
Image version: Option LuvitRED 2.0 - 2.27.0




LoRaWAN Sensor Activation LuvitRED

After completing one time setup, “LuvitRED” option will be shown under the “Plugins” tab. The user can access to LuvitRED by clicking “Plugins -> LuvitRED”. A new screen appears after clicking “Plugins -> LuvitRED”. Click on the “Advanced Editor” to access LuvitRED.

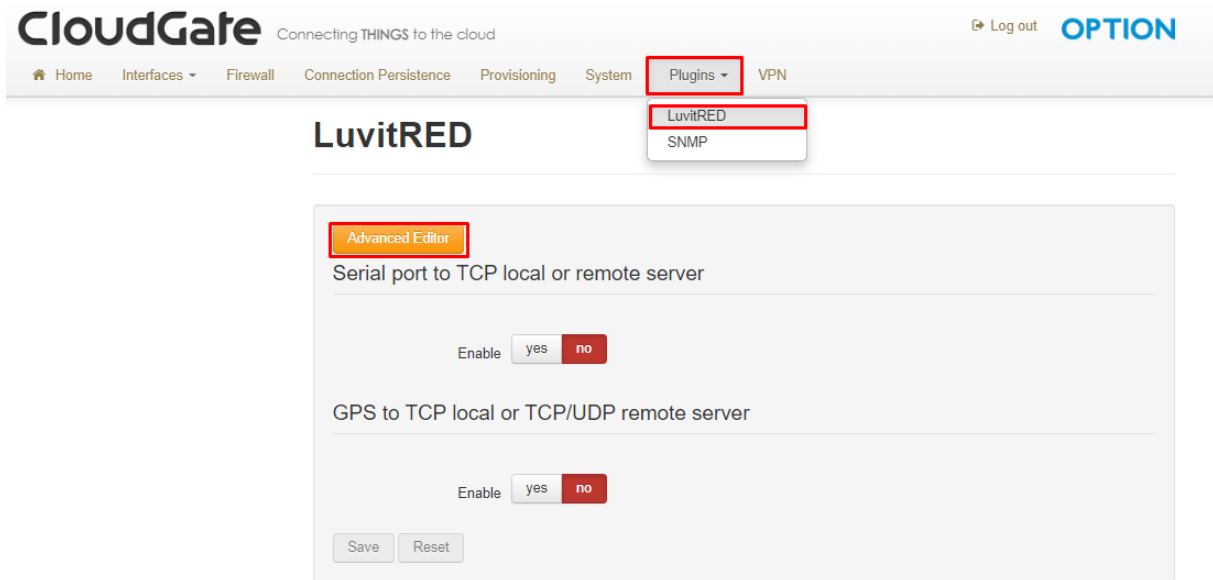

The following screen will appear after opening LuvitRED.

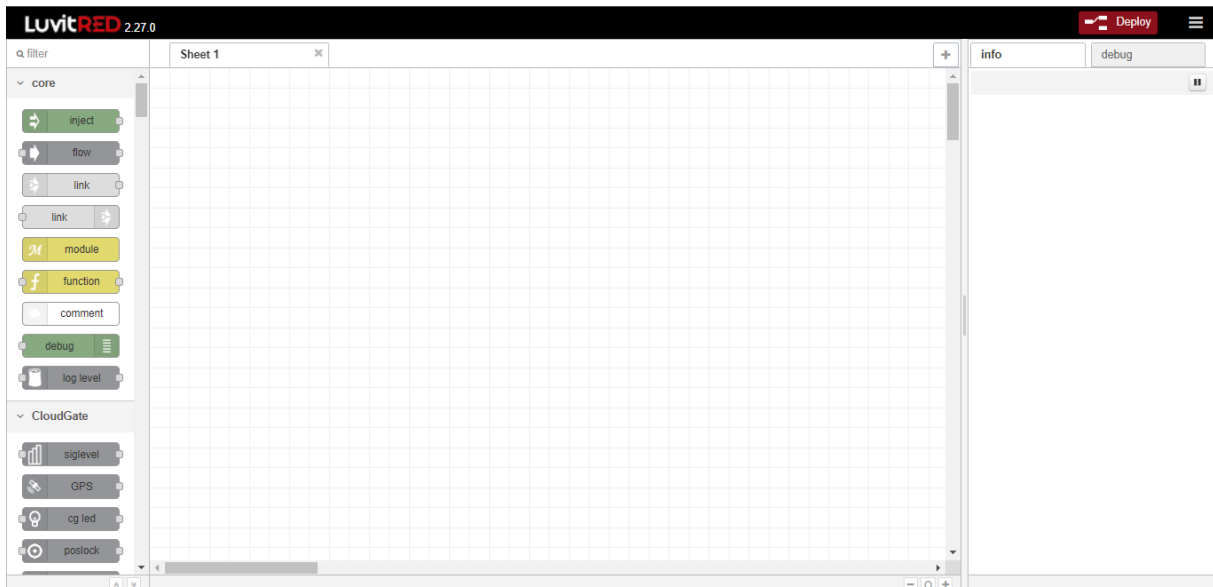






Import the application that we provide you by following the below steps. Download the application from the following link or use the embedded document below.




Modbus_Bridge_Lu
vitRED_v2.27.0.json

The user can only import JSON files, by clicking menu icon at the top right side and click "Import -> From File" then choose the file we provide you.

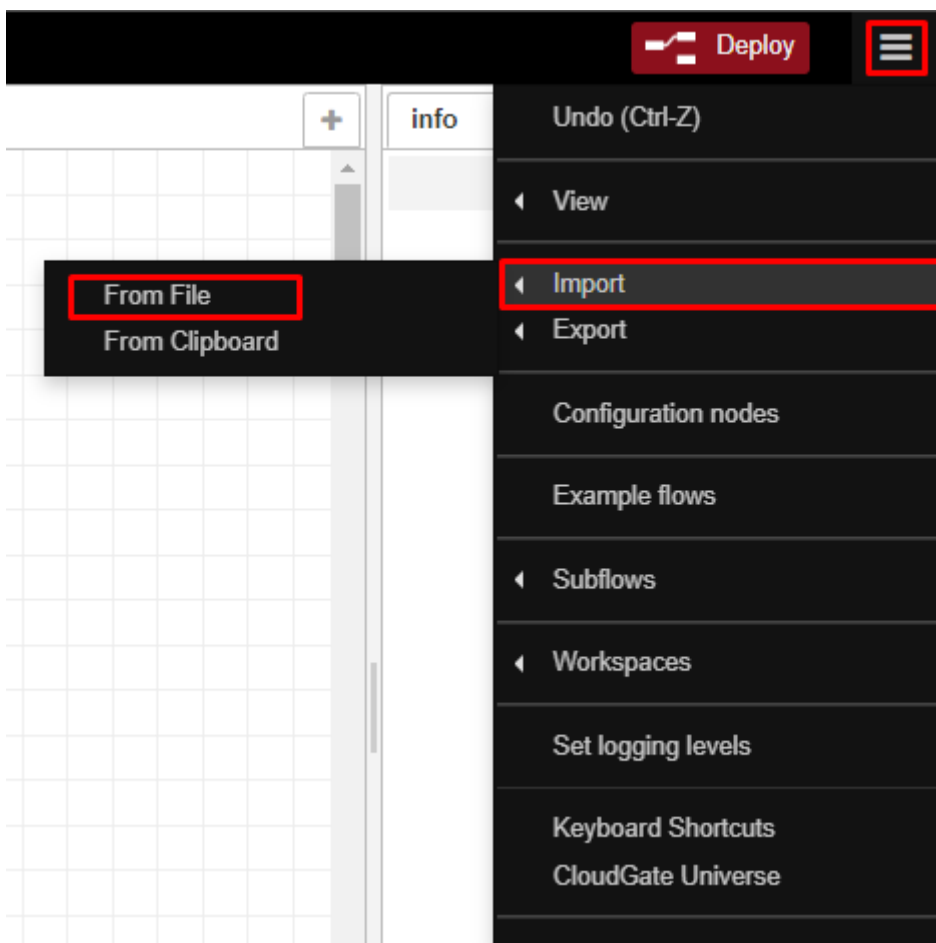

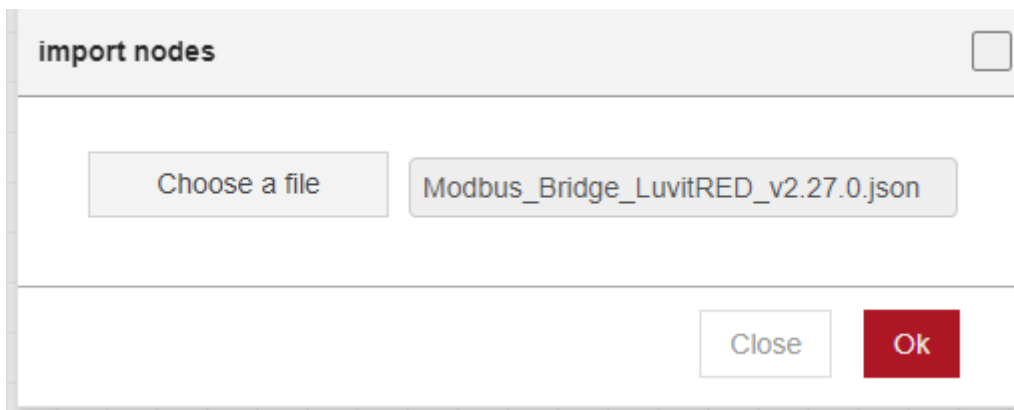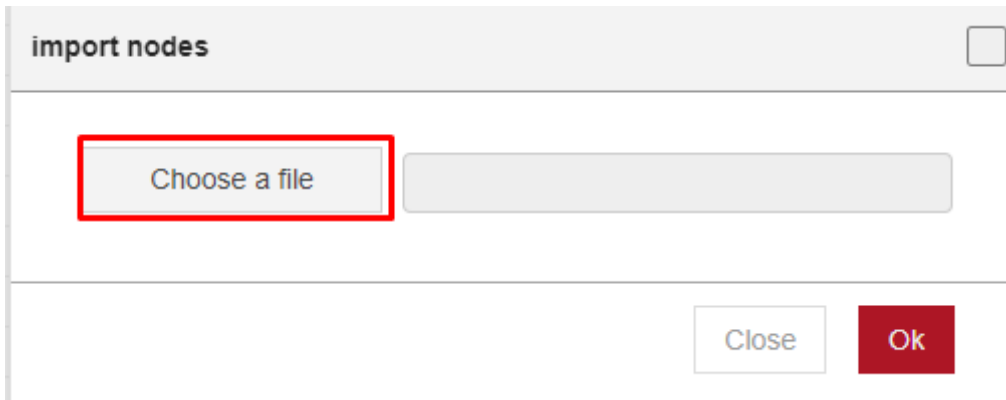

Application should look like the following flow.

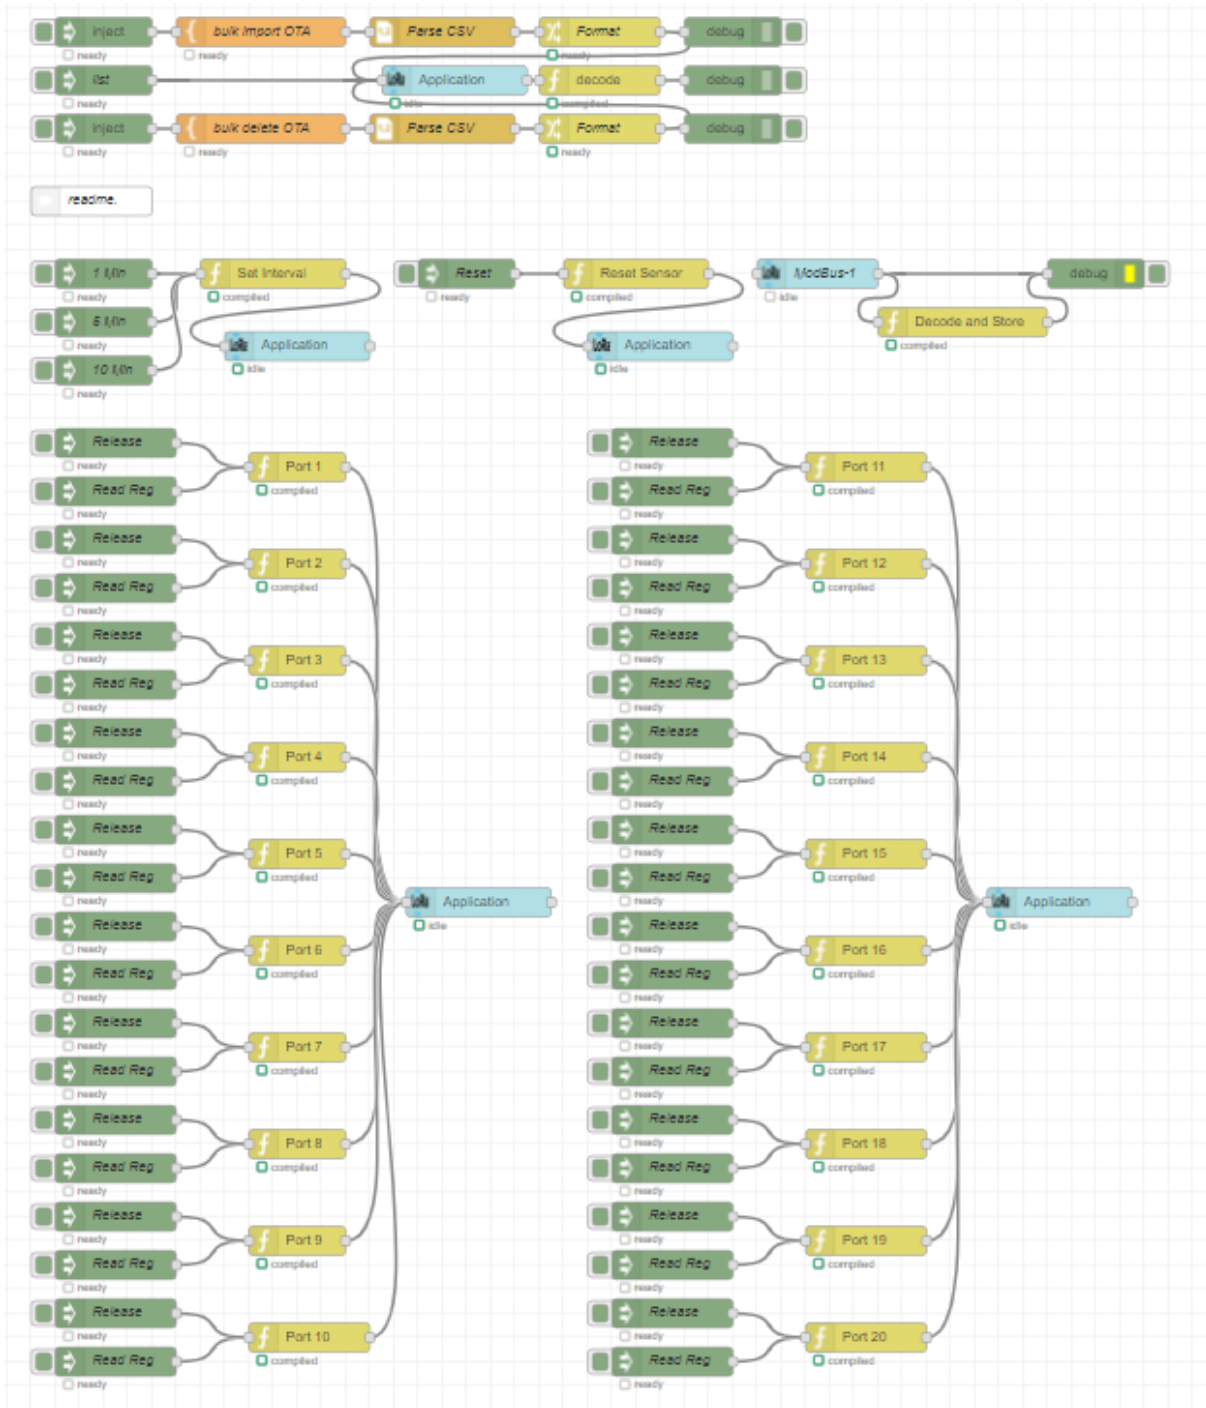


Flow Configuration



As a next step we will enter "Device EUI" and "App Key" to connect our sensor.

Firstly, double click on "bulk import OTA" node and enter name, device EUI, and application key, as string.

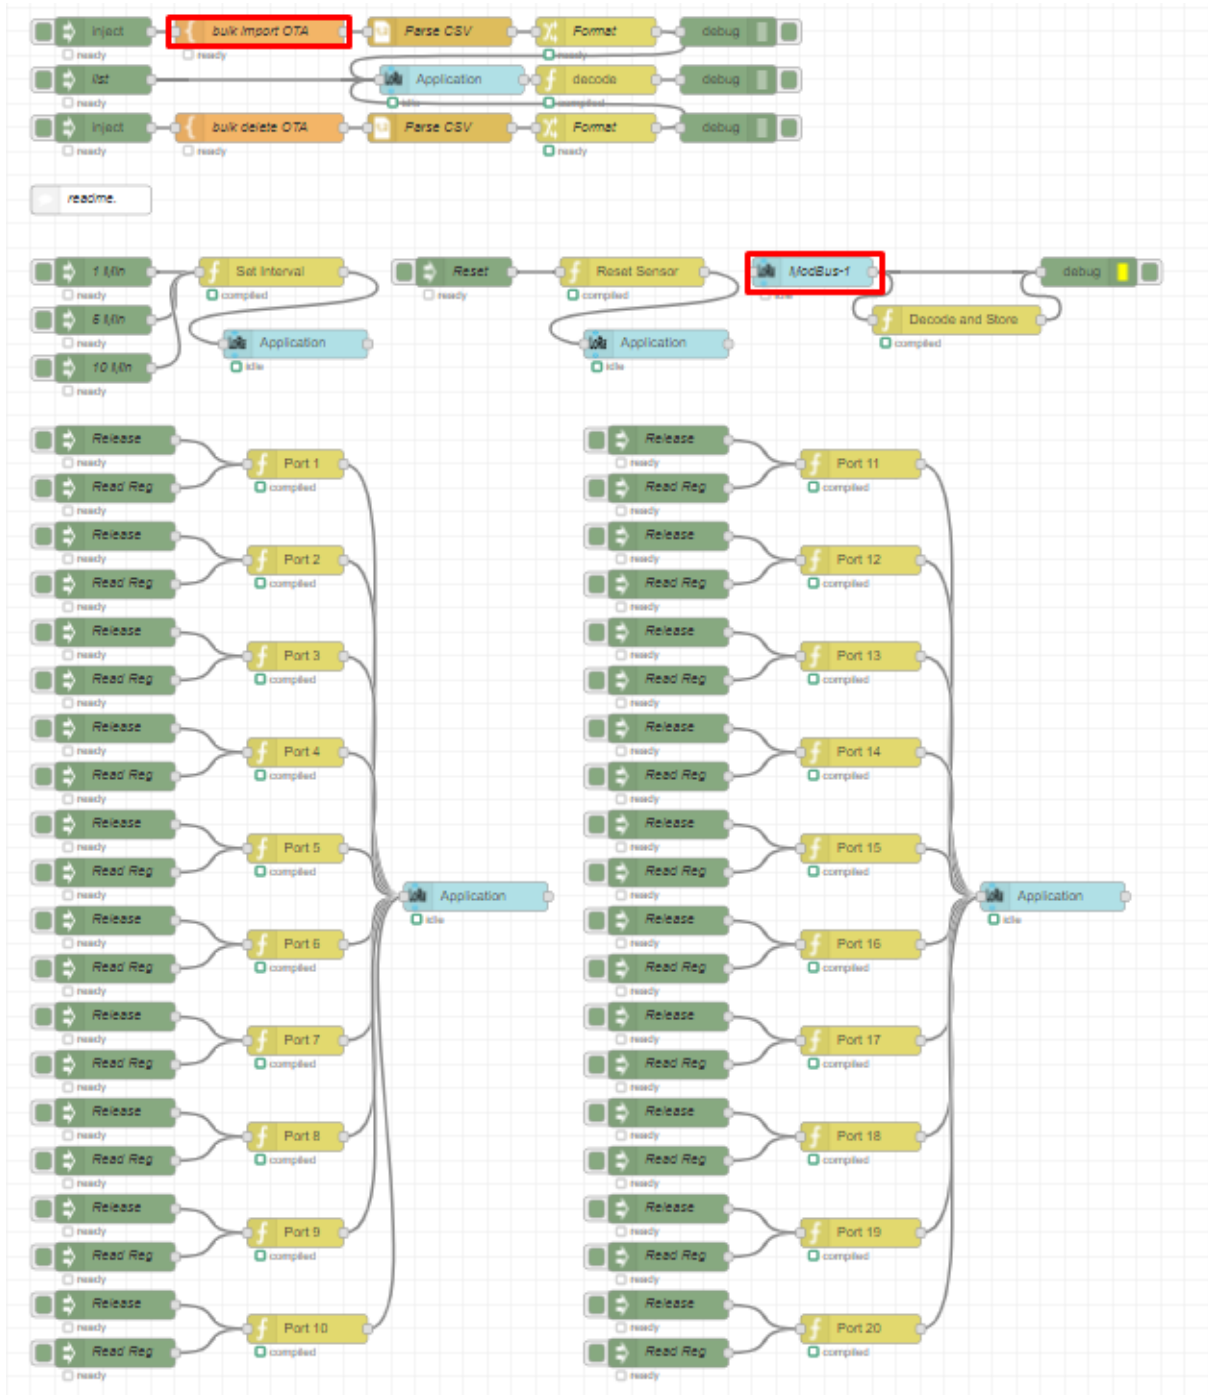



Here is an example

Edit template node

Delete Cancel OK

Name

Template

```
1 name,DevEUI,AppKey
2 "deviceName", "123456", "654321"|
3
```



Once it is done click “OK” and double click “Modbus-1” node and enter Device EUI and Application Key into related sections.

Edit lora device node

Delete Cancel OK

Name

Application LoRa Application

Class A

Activation Over the Air

Dev EUI

App Key

FPort


Send confirmed downlink data

Enable Adaptive Data Rate

Delete node



Lastly enter your Device EUI to the Set Interval, Reset Sensor and all Port nodes.

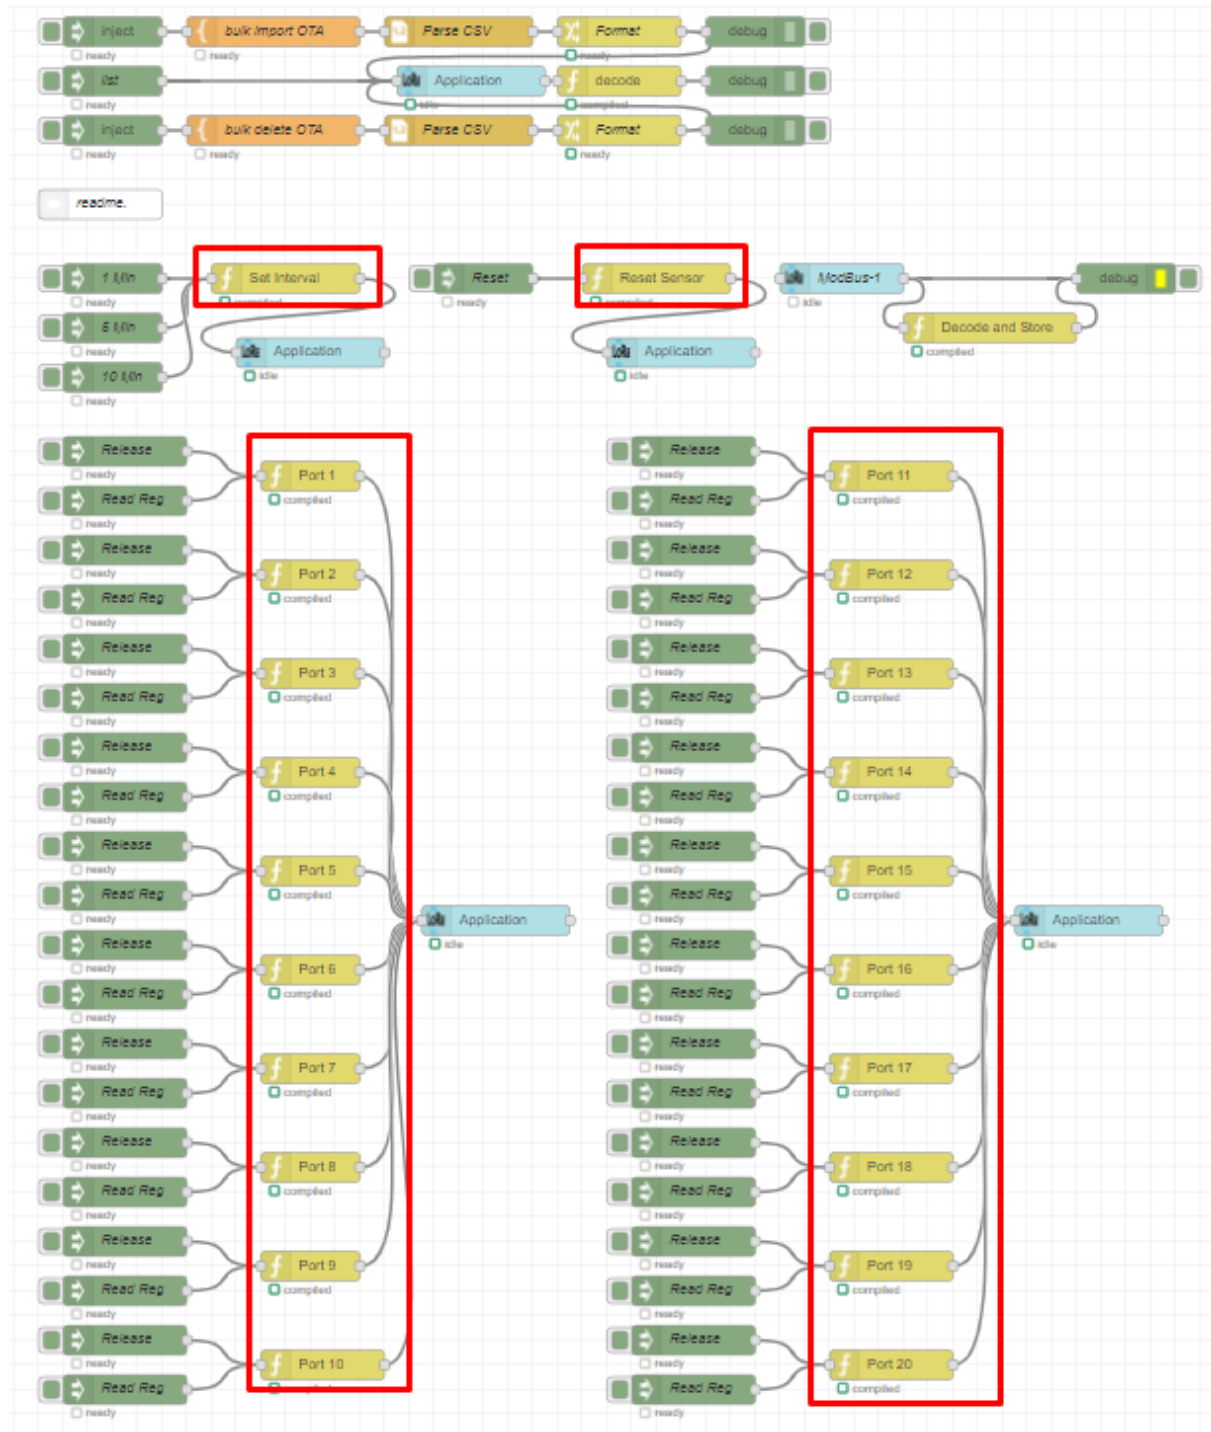



Enter your Device EUI to the following section.

Name

Reset Sensor

```
1  |-- Create a payload
2  local data = msg.payload
3  p(data)
4  msg.app = {
5  ▾   queue = {
6  ▾     ['645367566B597033'] = {
7  ▾       data=data,
8  ▾       fport = 0X0A,
9  ▾       confirmed = false
10 ▾     }
11 ▾   }
12 ▾ }
13 return msg
```

Call with empty message on startup ?

Outputs

1



Enter your Device EUI to the following section.

Name

Set Interval

```
1  |-- Create a payload
2  local data = msg.payload
3  p(data)
4  msg.app = {
5    queue = {
6      ['645367566B597033'] = {
7        data=data,
8        fport = 0X08,
9        confirmed = false
10   }
11  }
12 }
13 return msg
```

Call with empty message on startup ?

Outputs

1



Enter your Device EUI to the following section for all the port nodes.

Name

```
1  |-- Create a payload
2  local data = msg.payload
3  p(data)
4  msg.app = {
5  queue = {
6  [ '7639792442264520' ] = {
7      data=data,
8      fport = 0X0B,
9      confirmed = false
10 }
11 }
12 }
13 return msg
```

Call with empty message on startup ?

Outputs



To learn how to read registers from your modbus device please refer to “readme” node, and configure your inject node according to it.



Once you configure your payload, you can deploy the application by pressing the “Deploy” button which is located on the top right of the page. Once you activate your sensor, it will join to the network. After you inject your payload to any of the ports, related register will be read and value from the register will be appear on debug screen.